
 
 























Lights Plus Quick User Guide

| Full ("Away") Arming | |
|--|---|
|  <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  |  <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High security mode:  <ul style="list-style-type: none"> ➤ code or use Proximity tag |
|  <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  |  <ul style="list-style-type: none">  to apply to all partitions, or slide a specific partition to the right under . |
|  <ul style="list-style-type: none"> ❖ Quick mode: . ❖ High security mode: Code ➤  |  <p>Press </p> |
|  <p>Full Arm all: Security ➤ </p> |  <p>Press </p> |
|  <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode:  ➤ code | |

Partial ("Stay") Arming



❖ Quick mode:



❖ High Security mode: Code >



❖ Quick mode:



❖ High security mode:



> code or use Proximity tag



❖ Quick mode:



❖ High Security mode: Code >



to apply to all partitions, or slide a specific partition to the left under



❖ Quick mode:



❖ High security mode: Code >



Press



Partial Arm all: Security > press



Press or large rounded button (installer-defined)



❖ Quick mode:



❖ High Security mode: Code >



code

Partition & Group Arming

❖ **Full partition arming:**

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >



❖ **Partial partition arming:**



Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >





Group Arming: "Groups" tab > press group letter

❖ **Full partition arming:**

Code >  > select **All** or specific partition number/s > 



❖ **Partial partition arming:**

Code >  > select **All** or specific partition number/s > 

Group Arming: Press group letter

❖ **Full partition arming:**

Code >  > select **All** or specific partition number/s > 



❖ **Partial partition arming:**


Code >  > select **All** or specific partition number/s > 

Group Arming: Press group letter

Note: Supports up to 3 partitions. Does not support Group arming.


❖ **Full partition arming:**

• **Quick mode:** Partition number > 

• **High Security mode:** Partition number >  > code or use Proximity tag



 
❖ **Partial partition arming:**

• **Quick mode:** Partition number > 

• **High Security mode:** Partition number >  > code or use Proximity tag

System Disarming



Code > "Security" menu > 




> code or use Proximity tag




Code > 



to disarm all partitions, or slide a specific partition to the center under  > enter code




Code > 



Press 





Disarm all: Security >  > code > press Disarm



 
Disarm all: Press 




❖ Quick mode: 
❖ High security mode:  > code

Partition & Group Disarming




Code > "Security" menu > "Partitions" tab > select the Partitions to Disarm > 



Partition disarming: Code >  > select All or specific partition number(s)



 
Partition disarming: Partition number >  > code




Partition disarming: Code >  > select All or specific partition number(s)

Duress Disarming



Duress code ➤ 
Note: Panel is silent (no alarm siren)



 ➤ duress code
Note: Panel is silent (no alarm siren)




Duress code ➤ 
Note: Panel is silent (no alarm siren)

Bypassing & Un-bypassing Zones









Code ➤ “Security” menu ➤ “Detectors” tab ➤ select a detector (zone) ➤ slide switch to the right to bypass




 ➤ code ✓ ➤ scroll to Activities menu ✓ ➤ Bypass ✓ ➤ Zones ✓ ➤ scroll to select a bypass option ✓.



 ← ➤ code  ➤ scroll to Activities menu  ➤ Bypass  ➤ Zones  ➤ scroll to select a bypass option 

Viewing System Troubles







Code ➤ from the Top Bar, press  to view troubles



 ➤ code ✓ ➤ scroll to View menu ✓ ➤ Trouble ✓ ➤ scroll to view troubles



 ← ➤ code  ➤ scroll to View menu  ➤ Trouble  ➤ scroll to view troubles

Viewing Last Alarm / Event Log



Code ➤ “History” menu ➤ press “All” to view all events, or search an event

Note: You can filter the search according to specific types of events:
All / Alarms / Troubles / Smart Home / Media Events



📄 ➤ code ✓ ➤ scroll to Event Log ✓ ➤ scroll to view events



⚙️ ➤ code  ➤ scroll to Event Log  ➤ scroll to view events


Viewing System Status



i for 2 seconds



❖ **Quick mode:**  for 2 seconds

❖ **High Security mode:**
 for 2 seconds ➤
code or use
Proximity tag




 
Press 



Press 



❖ **Quick mode:**  for 2 seconds

❖ **High Security mode:**  for 2 seconds ➤ code

Activating Output



Code > "Security" menu > "Utility Output" tab > select relevant Utility Output button, ✓



⬅ > code ✓ > scroll to Activities menu, ✓ > scroll to Utility Output menu > enter Utility Output number ✓. **Note:** Must be installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds
 ❖ **High security mode:** Press button (1–3) for 2 seconds > code or use Proximity tag. **Note:** Must be installer-defined



⚙️ < > code > scroll to Activities menu, > scroll to Utility Output menu > enter Utility Output number . **Note:** Must be installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds
 ❖ **High security mode:** Press button (1–3) for 2 seconds > enter code. **Note:** Must be installer-defined

Activating a Panic Alarm



Press the Emergency button (located at the top of the Lock Screen or at the end of the main menu) > > press and together for 2 seconds.



Press and together for at least 2 seconds



Press and together for 2 seconds



Press and together for at least 2 seconds



 
Press and simultaneously



Press and together for 2 seconds.

Activating a Fire Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press **4** and **5** together for at least 2 seconds.







Press **3** + **4** together for 2 seconds



Press **4** and **6** together for at least 2 seconds

Activating an Auxiliary Emergency Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.









Press **7** and **8** together for at least 2 seconds.



Press **5** + **6** together for 2 seconds



Press **7** and **9** together for at least 2 seconds.




| SMS Commands | | |
|--|--|--|
| NOTES: Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add RP to the end of an SMS command. | | |
| Full Arm: code + A (Example: 1234A) | Get system status: code + ST | |
| Home Arm: code + H | Bypass Zone: code + B + zone number | |
| Group Arm: code + G + select group A--D | Un-bypass Zone: code + UB + zone number | |
| Full Disarm: code + D | View last alarm : code + AL | |
| Partition Full Arm: code + A: + partition number | Change FM number: code + FMPHONE + FM serial number + NEW + new phone number | |
| Partition Home Arm: code + H: + partition number | | |
| Multiple Partition Full/Home Arm: code + A/ H: + partition number A, + partition number B, + partition number C, etc. | Activate Output: code + UOON + UO number | |
| Partition Disarm: code + D: + partition number | Deactivate Output: code + UOOFF + UO number | |
| Multiple Partition Disarm: code + D: + partition number A, + partition number B, + partition number C, etc. | Get SIM credit level: code + CR | |
| Icons – Elegant Keypad | | |
|  Power On: Power OK. Off: No power Rapid flash: System trouble. Slow flash: System is programming |  Ready On: Ready to arm Off: Not ready to arm Slow flash: Ready to arm while entry/exit zone is open |  Arm On: System in fully armed mode Off: System disarmed Rapid flash: Alarm Slow flash: System in Exit Delay |
|  Partial Arm / Bypass On: System in partially-armed or zone-bypassed mode Off: No bypassed zones |  Tamper On: Tamper alarm Off: No tamper alarm |  Fire On: Fire alarm Off: No fire alarm Flash: Fire circuit trouble |

LED Indicators – 2-Way Remote Control










| Operation | Send command* | Receive Status |
|-------------|---------------|----------------|
| Full Arm | Green | Red |
| Partial Arm | Green | Orange |
| Disarm | Green | Green |
| Alarm | Green | Flashing LED |

* If the LED changes to orange, it indicates a low battery condition.

Defining User Codes – Elegant Keypad

1.  ➤ Grand master **code** (default = 1234) ✓
2.  to scroll to **Codes/Tags** ➤ press ✓ twice.
3.  to scroll to the user (index number) for defining ➤ press ✓ twice.
4. Enter (or re-enter) a 4–6 digit code ✓ ; the system beeps and ACCEPTED displays

Defining User Codes – Panda Keypad

1.   ➤ Grand master **code** (default = 1234) ✓
1.   to scroll to **Codes/Tags** ➤ press  twice.
2.   to scroll to the user (index number) for defining ➤ press  twice.
3. Enter (or re-enter) a 4–6 digit code  ; the system beeps and ACCEPTED displays

Registering to the RISCO Cloud

Note: Before registering, consult with your Installer to check if you were previously registered:

If you were previously registered:

- a. If you are a RISCO Cloud End-User, accept the invitation sent to your Inbox and then Login to the RISCO Cloud / Web User Application.
- b. If you are not a RISCO Cloud End-User, accept the invitation sent to your Inbox and then follow the instructions to finalize the creation of your account.

If you were not previously registered:

- 1 After the RISCO Cloud has been enabled by your system installer, go to www.riscocloud.com and press **Register**.
- 2 Fill in your **first and last name**.
- 3 Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 8 characters, including at least one small case, one upper case and one special character), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the LightSYS Plus User Manual).
- 6 Complete registration form including Site Name, Time Zone and Equipment ID and then press **Create**.
- 7 To complete the registration procedure, open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to www.riscocloud.com
- 2 Enter your **user name** and **password** (as defined during the registration process).
- 3 Click **Login**.
- 4 Select the Site and then enter the **system PIN code** (user code).
- 5 Click **Login**.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.



For additional information see the LightSYS Plus User Manual, available on our website:
www.riscogroup.com

© RISCO Group 2022. All rights reserved.