



PIR Cam support is under development
Wireless PIR Cam Expander will also support wireless detectors, sounders, keypads and keyfobs



Fast Bus for Wireless PIR Cam

Plug-in PSTN Modem
RP512MD2400A



Plug-on IP Modules
RP512IPWV00A Multi Channel+ WiFi+ PIR Cam
RP512IPW000A Multi Channel+ WiFi
RP512IP0000A Multi Channel IP
RW132IP0000A Single Channel IP



Plug-in 3G/2G Modules
RP512G30000A 3G/GSM
RP512G20000A 2G/GSM
RP432GSM000A GSM/GPRS



RISCO Cloud Server



SynopSYS™ Security Management Software



Monitoring Stations



www.riscocloud.com web interface



App Store Play Store RISCO

Configuration Software



ProSYS Plus Main Board
RP512M00000A
Grade 3 or 2, selectable
8-512 Zones
32 Partitions
4 Groups per Partition
6-262 Outputs
500 User Codes
2000 Event Log
Selectable Zone Resistance

USB Cable, PC to Panel
RP512USB000A



- 4 independent RS485 Main Bus lines
- Up to 32 Bus devices per Bus line: Keypads, Expanders, Bus Detectors & Sounders
- 300m max. length for each Bus line with standard alarm cable
- 1000m max. length for each Bus line with shielded twisted pair Cat. 5 cable, and on condition Bus Test result is above 97%

Long Range Radio Transmitter



4 Main Bus Lines



Voice Module
RP432EV0001C



Listen-in & Speak Module
RW132EVL000A

Elegant Keypads

RPKELW0000A
RPKELPW0000A with prox
RPKELB0000A black
RPKELPW0000A black with prox



Touchscreen Keypads

RP128KP0200A
RP128KPP200A with prox



ProSYS Keypads

RP128KCL0ICA
RP128KCLPICA with prox




LightSYS Keypads

RP432KP0000A
RP432KPP000A with prox



Prox Key Readers
RP128PKR300A
For Italian market

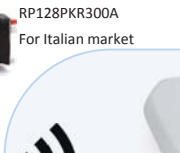

WAN



Indoor Cube IP Cameras
RVCM11H0000A



Outdoor Bullet IP Cameras
RVCM52E0100A

Wireless Sounders



x32 wireless sounders per system
x3 per Wireless Expander

2-Way Wireless Slim Keypads



x32 wireless keypads per system
x2 per Wireless Expander



Wireless BWare DT



Wireless Curtain PIR



2-Way Keyfob



1-Way Keyfob

x256 Rolling Code Keyfobs per system
x16 per Wireless Expander



Wireless Door/Window Contacts



WL Smoke & Heat Detector



Panic Keyfob



Wristband Panic

x256 Zone/Panic Keyfobs per system
x32 per Wireless Expander



Wireless CO & Gas Detectors



Wireless Flood Detector

x256 wireless detectors per system
x32 per Wireless Expander

4 x 3A Relay Output Expander
RP296E04000A




x32 per system
x8 per Bus

16 Zone Expander
RP512EZ1600A



x35 per system
x32 per Bus

8 Zone Expander
RP432EZ0800A



x32 per system
x8 per Bus

8 x 100mA O.C. Output Expander
RP296E08000A



x32 per system
x8 per Bus

1.5A Power Supply
RP296EPS PCB
RP296EPSP00A Boxed, EU



x32 per system
x8 per Bus

3A Power Supply
RP128EPS000A PCB
RP128PSPSEUA Boxed, EU



x32 per system
x8 per Bus

Bus Zone Expander
RP128EZB000B

Acts as Bus Isolator and Bus detector concentrator



x32 per system
x8 per Bus



WatchOUT



WatchOUT NG



Industrial Lunar



BWare Bus



Seismic Detector



Single Zone Expander
RP128EZ0100A

Detector Bus Lines

Up to 512 Bus Detectors per system
Up to 32 per Bus Zone Expander, or directly on main panel per Bus, with shielded twisted pair Cat. 5 cable
Up to 20 Bus Detectors recommended per Bus Zone Expander or main panel Bus, for better performance with regular alarm cable, and for higher security

ProSound



Lumin8



x32 sounders per system
x8 per Bus